

PARTS LIST

BC4320H-RS

CONTENTS


1. MAIN BODY	1 ~ 2
2. GEARCASE	3 ~ 4
3. ENGINE	5 ~ 8
4. CARBURETOR, FUEL TANK	9 ~ 12

2008. 01.










P/N 522319-1

1. BC4320H-RS
MAIN BODY

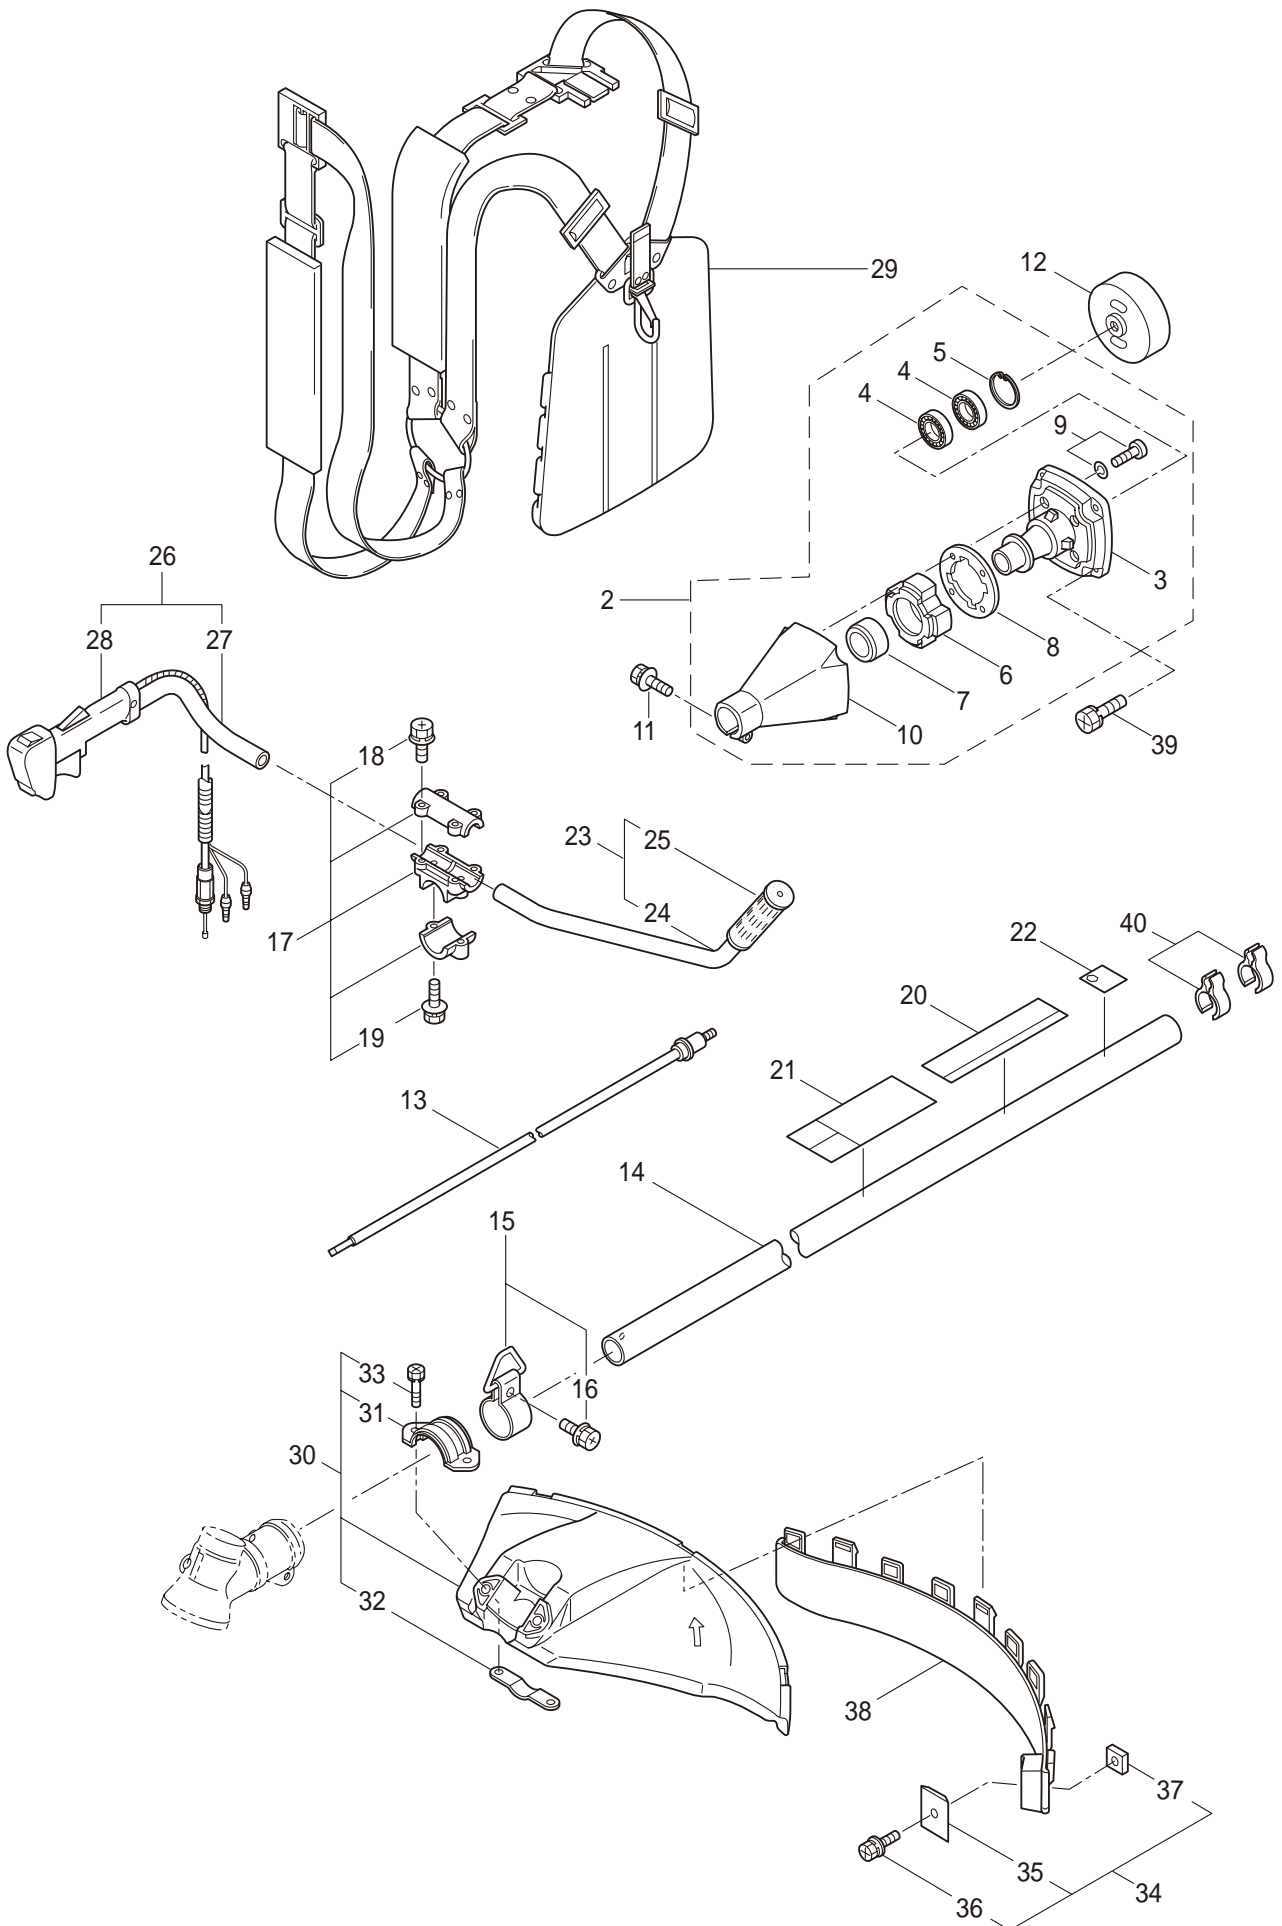


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	363298	BC4320H-RS	1	
1-2	228329	Clutch Case Ass'y	1	Incl.3-10
1-3	227729	Bearing Case	1	
1-4	140474	Bearing	2	#6202ZZ
1-5	012380	Snap Ring	1	#35
1-6	217045	Buffer (A)	1	
1-7	217046	Buffer (B)	1	
1-8	217047	Washer	1	
1-9	092033	Screw	4	M5x15
1-10	227728	Driveshaft Tube Adapter	1	
1-11	092556	Bolt	1	M6x30
1-12	211203	Clutch Drum	1	
1-13	217897	Driveshaft Ass'y	1	
1-14	217900	Driveshaft Tube	1	
1-15	217850	Hanging Bracket Ass'y	1	Incl.16
1-16	092548	Bolt	1	M5x15
1-17	217638	Bracket Ass'y	1	Incl.18,19
1-18	092554	Bolt	4	M6x25
1-19	092556	Bolt	2	M6x30
1-20	228333	Label	1	BC4320H-RS
1-21	223188	Label	1	
1-22	228207	Label	1	
1-23	228398	Handle Ass'y-Left	1	Incl.24,25
1-24	228399	Handle (A)	1	
1-25	226512	Grip	1	
1-26	229074	Handle Ass'y-Right	1	Incl.27,28
1-27	228401	Handle (B)	1	
1-28	229005	Throttle Trigger	1	
1-29	219612	Hanging Strap Ass'y	1	
1-30	228303	Safety Cover Ass'y	1	Incl.31-33
1-31	223179	Bracket	1	
1-32	223180	Threaded Bracket	1	
1-33	092555	Bolt	2	M6x30
1-34	228301	Code Cutter Ass'y	1	Incl.35-37
1-35	227823	Code Cutter	1	
1-36	817002	Bolt	1	M5x20
1-37	228325	Nut	1	
1-38	227812	Extension	1	
1-39	092552	Bolt	4	M6x20
1-40	219161	Wire Guide	2	

2. BC4320H-RS GEARCASE

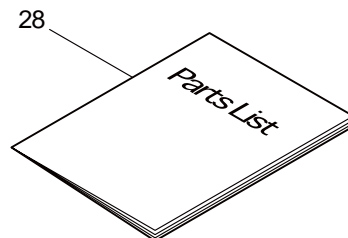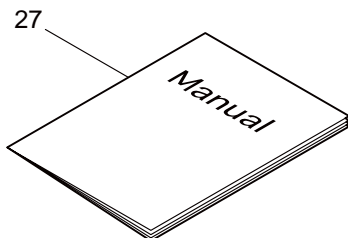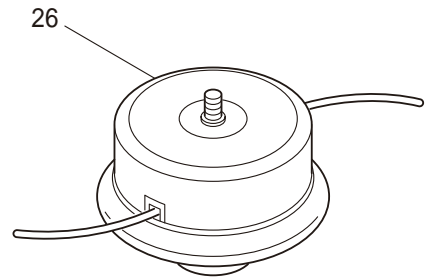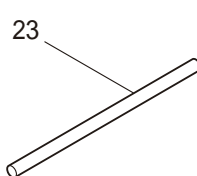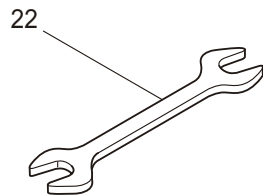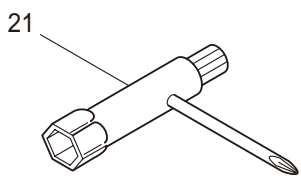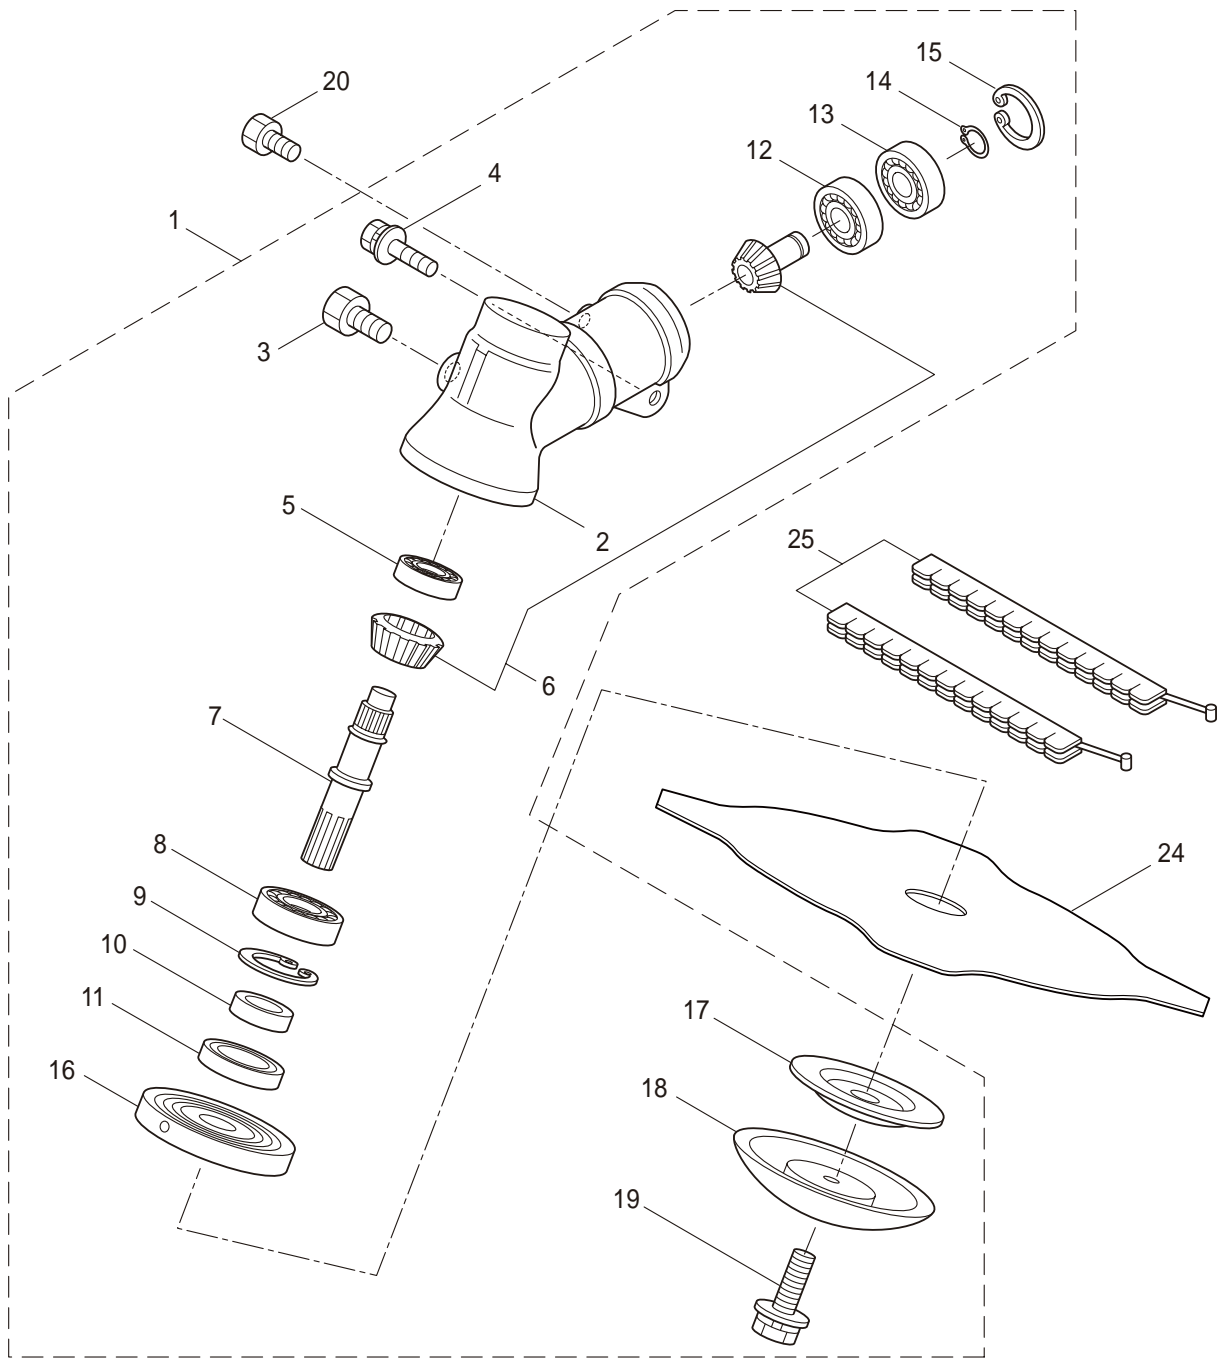


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	219645	Gearcase Ass'y	1	Incl.2-19
2-2	219646	Gearcase	1	
2-3	089884	Bolt	1	M8x10
2-4	092556	Bolt	1	M6x30
2-5	210560	Bearing	1	#609
2-6	227102	Gear Set	1	
2-7	217057	Blade Shaft	1	
2-8	022009	Bearing	1	#6002
2-9	016732	Snap Ring	1	#32
2-10	212394	Collar	1	15x22x8L
2-11	211818	Oil Seal	1	D22 32 6
2-12	014490	Bearing	1	#6000
2-13	106933	Bearing	1	#6000Z
2-14	014210	Snap Ring	1	#10
2-15	054676	Snap Ring	1	#26
2-16	217060	Boss Adapter	1	
2-17	217061	Clamping Washer	1	
2-18	210308	Stabilizer	1	
2-19	215610	Bolt	1	M8x22,Counterclockwise
2-20	089747	Bolt	1	M6x12
2-21	210418	Box Spanner	1	13x19x(+)
2-22	022865	Double-endedWrench	1	8x10
2-23	210181	LeverHandle	1	3.5x170L
2-24	054751	Mowing Blade	1	255x4
2-25	220534	Blade Cover	1	
2-26	227409	Nylon Head (L) 5	1	
2-27	228586	Instruction Manual	1	
2-28	522319	Parts List	1	BC4320H-RS

3.BC4320H-RS
ENGINE

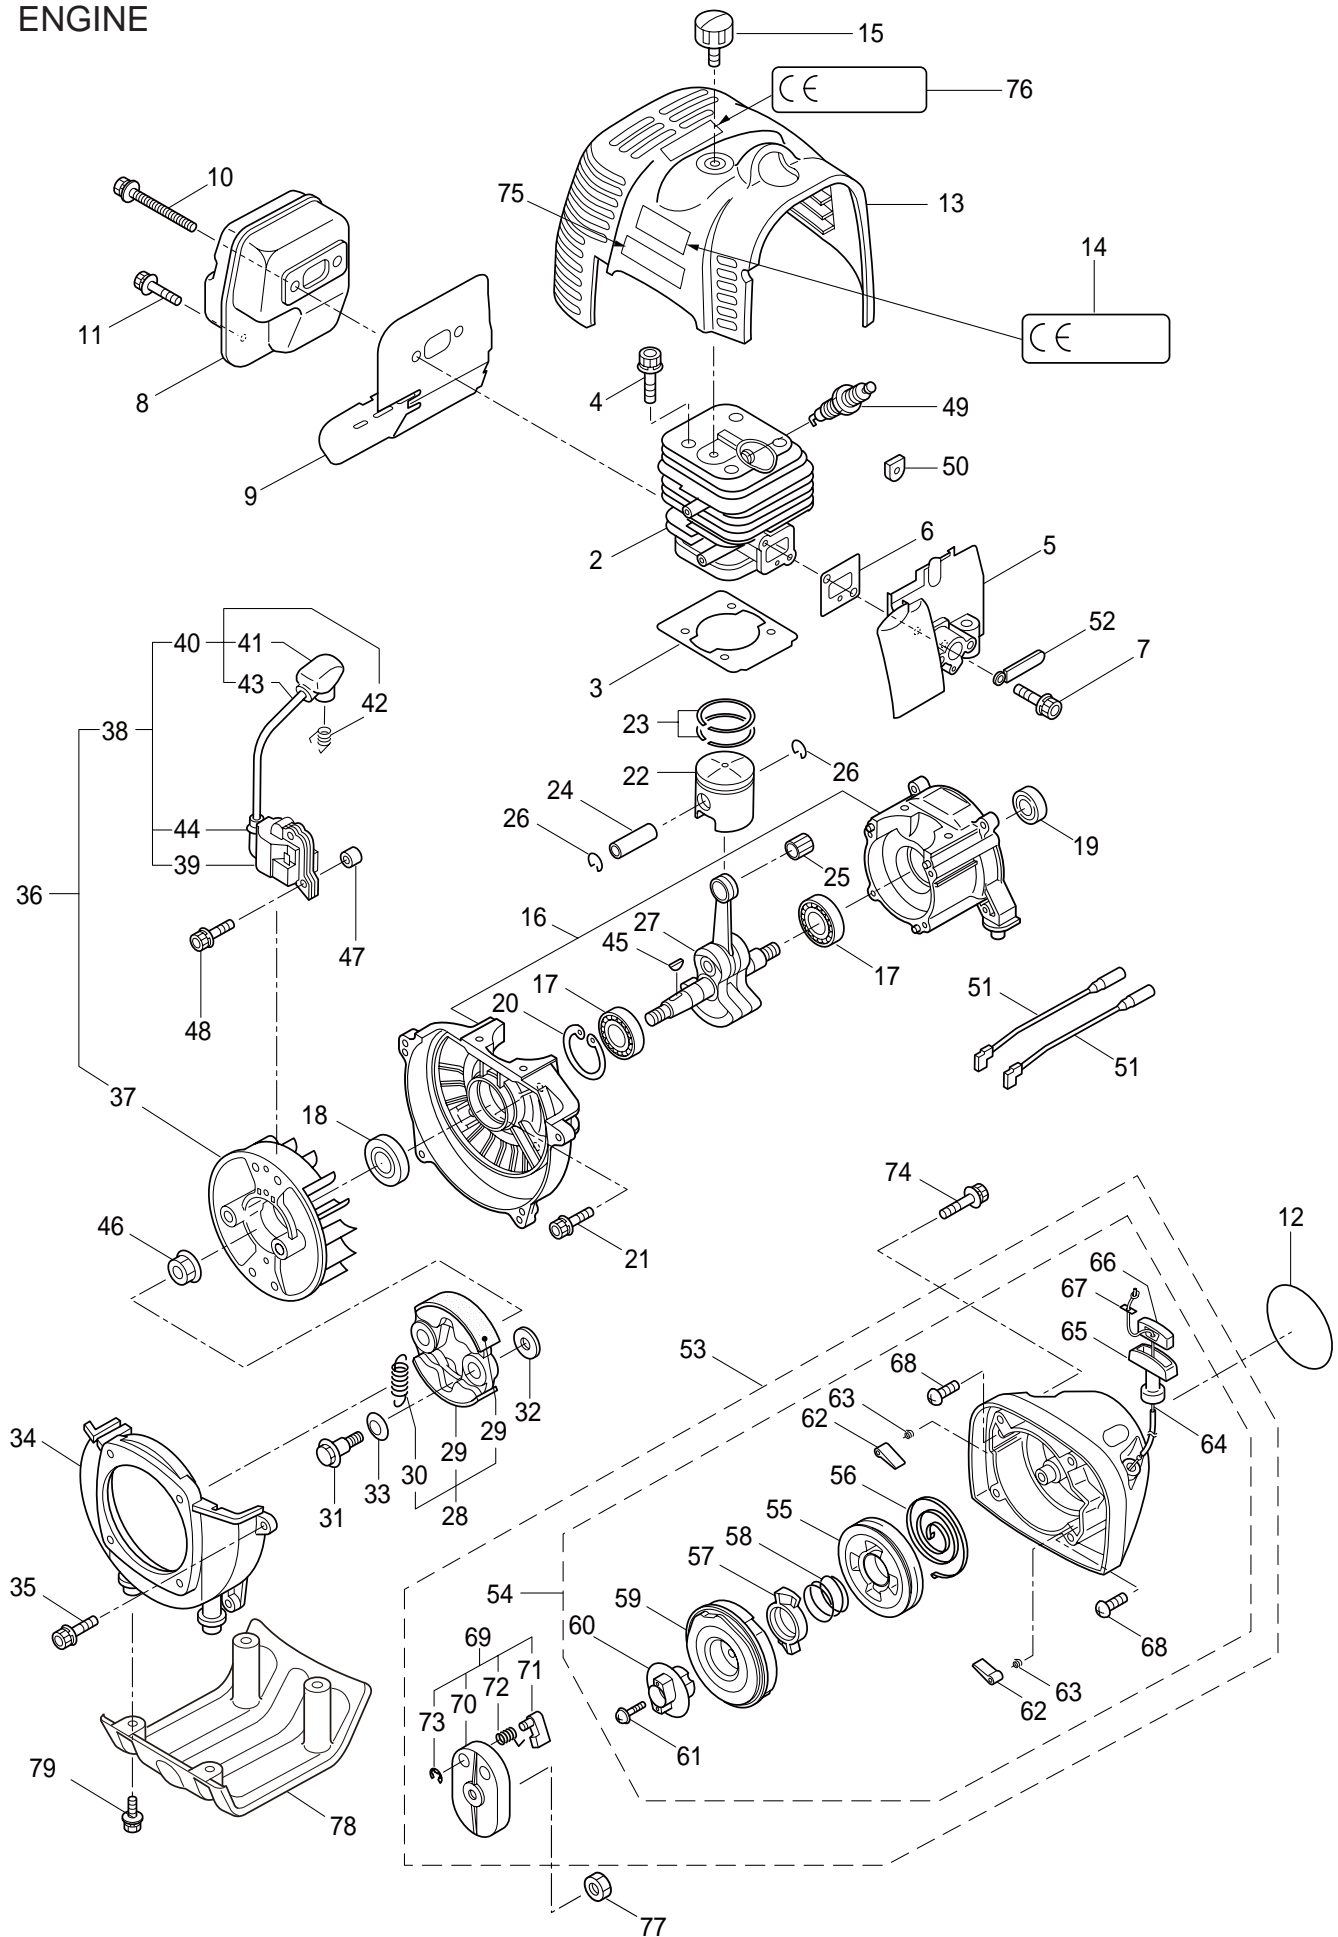


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	858297	Engine	1	NE420/13
3-2	282257	Cylinder	1	New gasket required
3-3	282259	Gasket	1	
3-4	261612	Cap Screw	4	M5x30
3-5	282261	Insulator	1	New gasket required
3-6	282262	Gasket	1	
3-7	267290	Cap Screw	2	M5x20
3-8	282264	Muffler Comp.	1	
3-9	282271	Gasket	1	
3-10	266713	Cap Screw	2	M5x60
3-11	283315	Screw	1	M5x12W-12
3-12	283135	Label	1	REVERSE2/NE420
3-13	282274	TopCover	1	
3-14	265694	Label	1	
3-15	262556	Knob	1	
3-16	282277	Crankcase	1	
3-17	262658	Bearing	2	#6202C3
3-18	262660	Oil Seal	1	TC15357
3-19	262565	Oil Seal	1	ISCD15257
3-20	012380	Snap Ring	1	#35
3-21	261612	Cap Screw	4	M5x30
3-22	265227	Piston	1	
3-23	262476	Piston Ring	2	(2)Required
3-24	262749	Piston Pin	1	
3-25	262659	Bearing,Needle	1	KTV111414EG01B2
3-26	262479	Clip,Piston Pin	2	
3-27	283038	Crankshaft/Conn.RodAss'y	1	
3-28	282743	Clutch Ass'y	1	Incl.29,30
3-29	282624	Clutch Shoe	2	(2)required
3-30	263617	Spring,Clutch	1	2.3-44.8L
3-31	282321	Cap Screw	2	M8x1.25
3-32	262683	Washer	2	8x22x1.2
3-33	262682	Wave Washer	2	
3-34	282285	FanCover	1	
3-35	261250	Cap Screw	4	M5x20
3-36	282287	Magneto Ass'y	1	Incl.37-44
3-37	282288	Rotor/Fan	1	
3-38	282289	Ignition Coil Ass'y	1	Incl.39-44
3-39	267572	Coil	1	
3-40	282290	Spark Plug Wire Ass'y	1	Incl.41-43
3-41	282292	Plug Boot	1	
3-42	261075	Connector	1	
3-43	282291	Spark Plug Wire	1	
3-44	261072	Cap	1	
3-45	261076	Woodruff Key	1	3x10

3. BC4320H-RS ENGINE

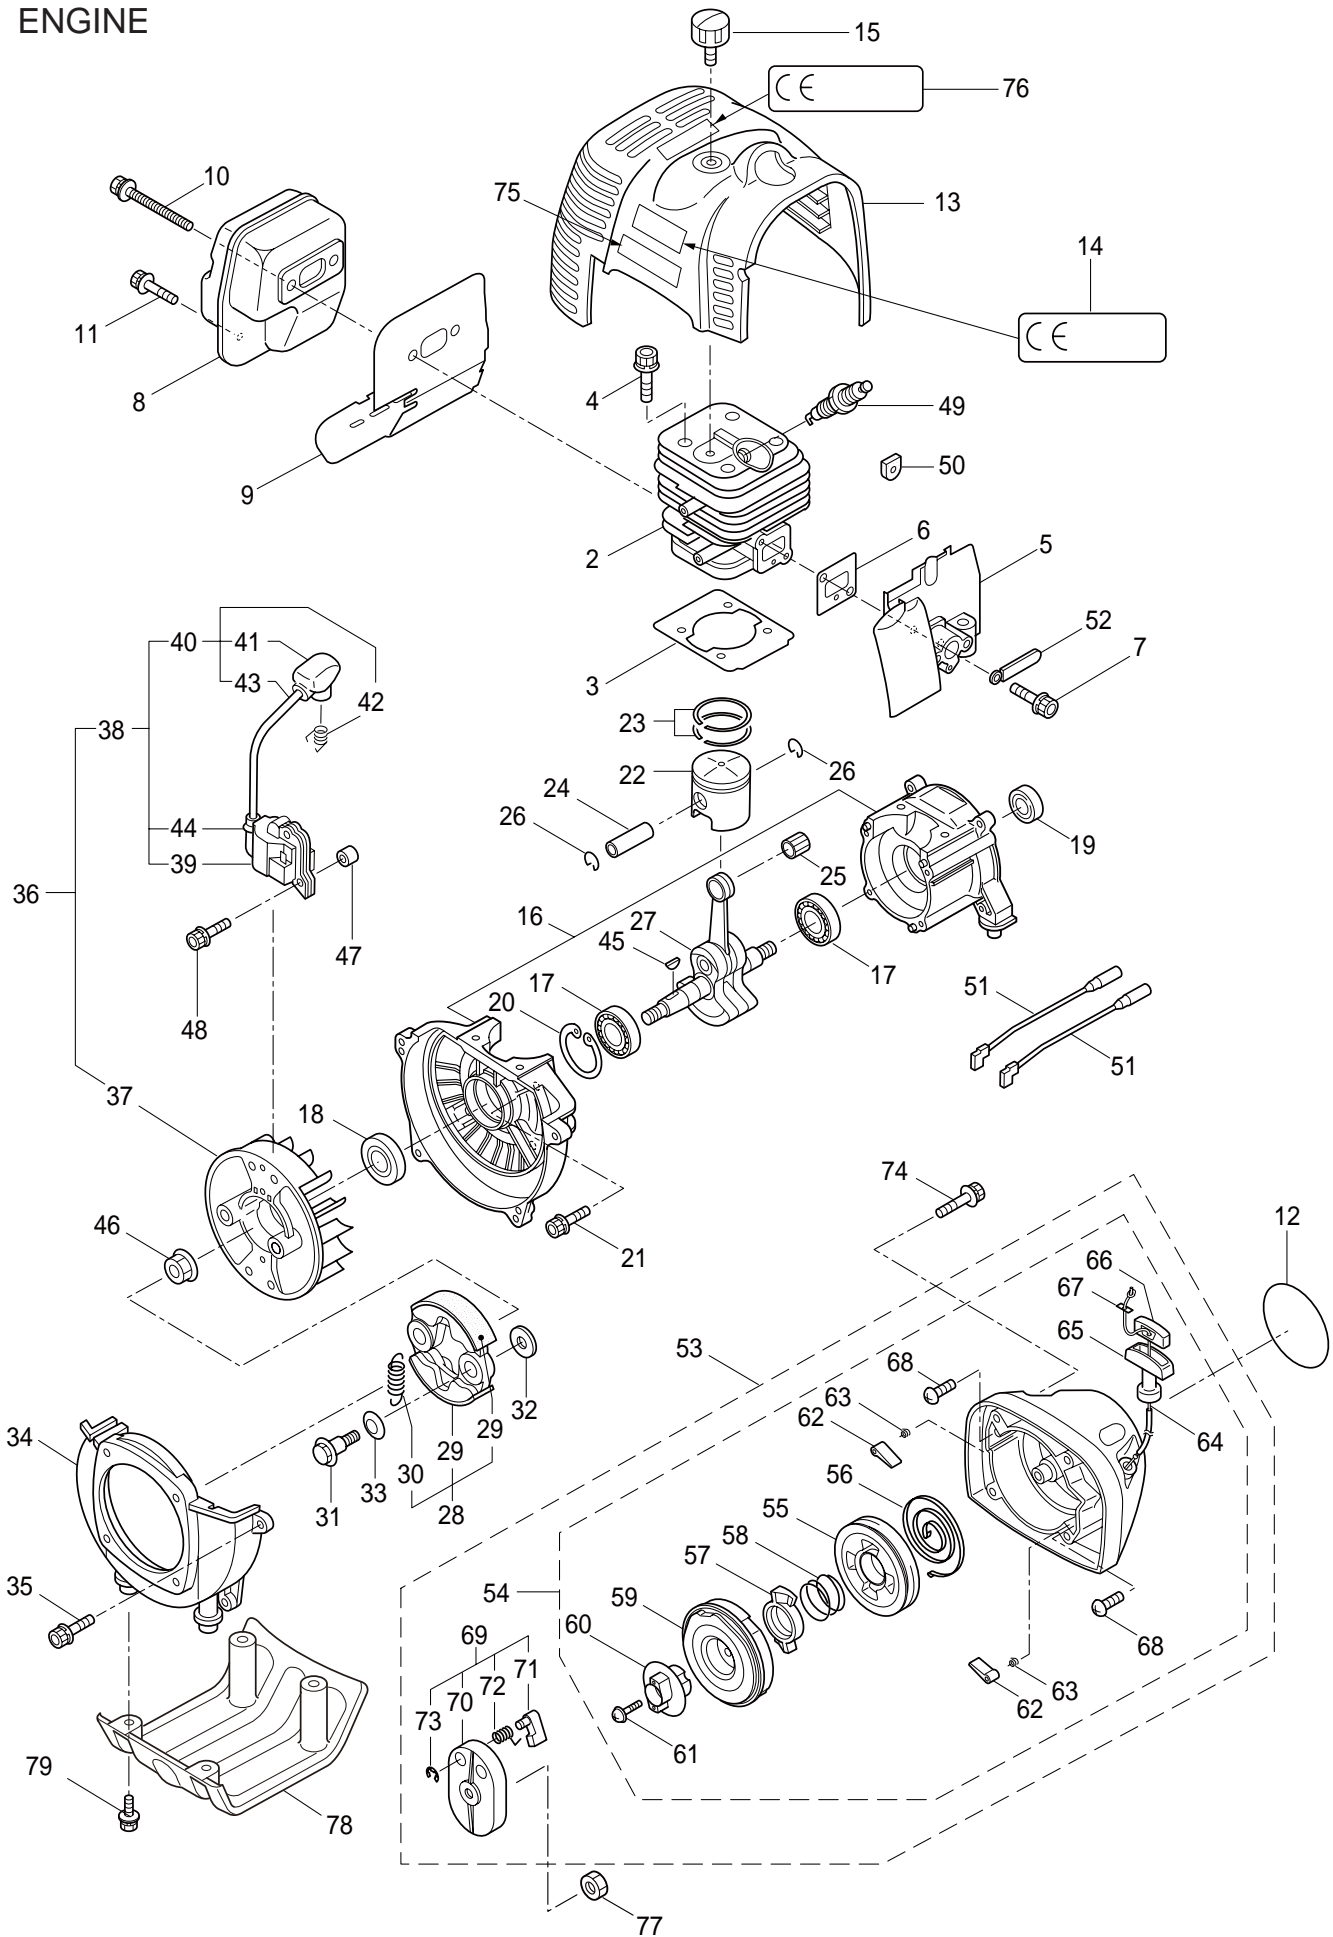


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	262731	Nut,Rotor	1	M10
3-47	280381	Spacer	2	
3-48	261256	Cap Screw	2	M4x25
3-49	262483	Spark Plug	1	NGK BP6Y
3-50	281172	Grommet	1	
3-51	267492	Lead	2	130L
3-52	264588	Clamp	1	
3-53	282294	Recoil Starter Ass'y	1	Incl.54-73
3-54	282295	Starter Ass'y	1	Incl.55-68
3-55	280994	Pulley	1	
3-56	280995	Spiral Spring	1	
3-57	280996	Pawl	1	
3-58	280997	Return Spring	1	
3-59	283123	Spring Comp.	1	
3-60	280999	Plate	1	
3-61	281000	Set Screw	1	
3-62	281001	Pawl	2	
3-63	281002	Return Spring	2	
3-64	281004	Starter Rope	1	
3-65	262633	Starter Grip	1	
3-66	262981	Cap	1	
3-67	281005	Rope Stopper	1	
3-68	282622	Screw	2	
3-69	282623	Starter Pulley Ass'y	1	Incl.70-73
3-70	282282	Starter Pulley	1	
3-71	262636	Pawl	2	
3-72	262637	Return Spring	2	
3-73	262638	E-Ring	2	
3-74	261607	Cap Screw	4	M5x16
3-75	262714	Label	1	MARUYAMA
3-76	267561	Label	1	
3-77	081040	Nut	1	M8
3-78	282317	Stand	1	
3-79	281714	Cap Screw	4	M5x20

4. BC4320H-RS
CARBURETOR, FUELTANK

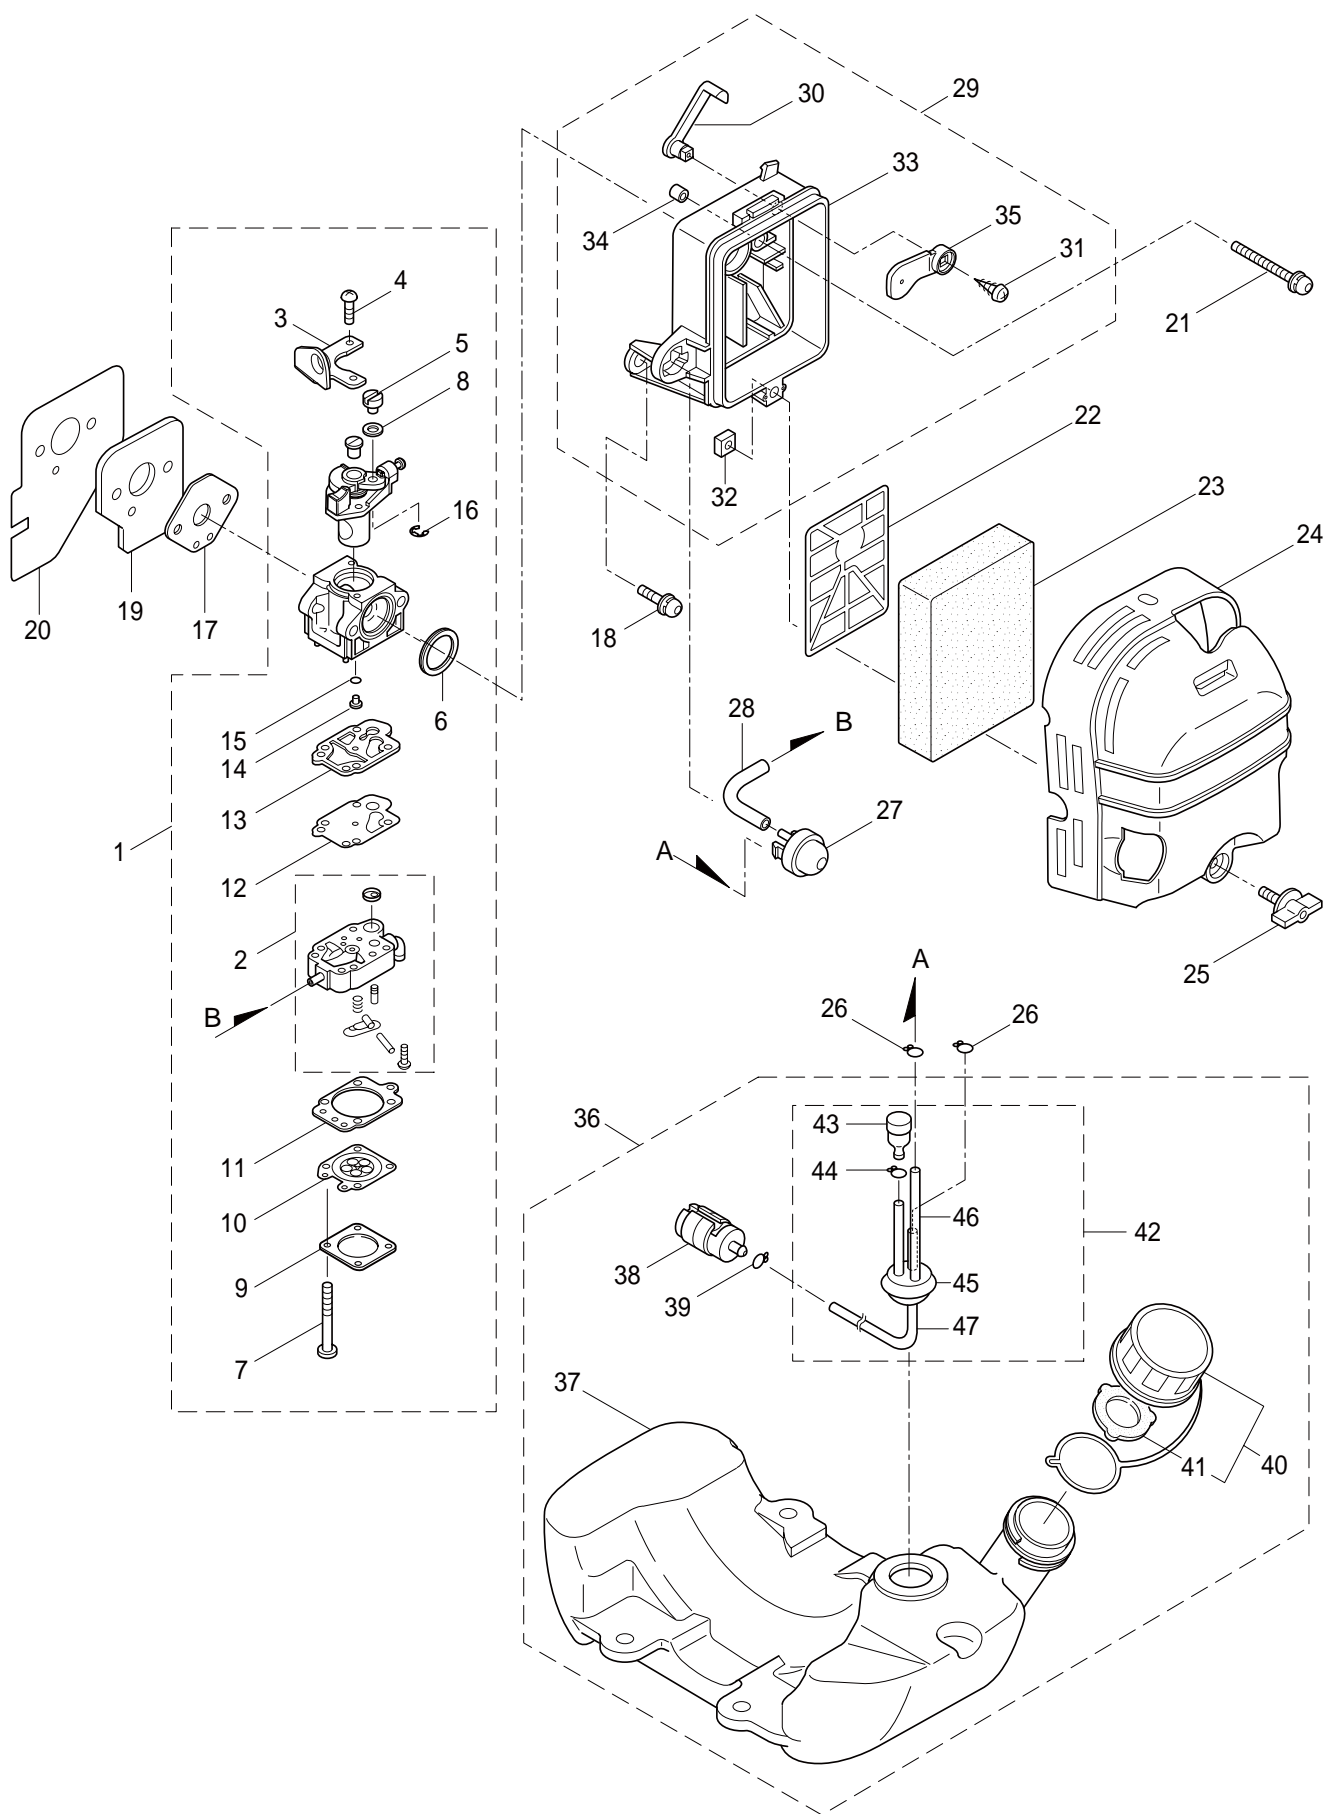

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	284109	Carburetor Ass'y	1	Incl.2-16
4-2	283124	Pump Body	1	
4-3	264677	Bracket	1	
4-4	261875	Screw	2	
4-5	261658	Swivel	1	
4-6	261657	Packing	1	
4-7	263737	Screw	4	
4-8	264678	Washer	1	
4-9	263726	Cover Plate	1	
4-10	283905	Diaphragm, Meterring	1	
4-11	263727	Gasket	1	
4-12	262994	Diaphragm, Fuel Pump	1	
4-13	282576	Gasket	1	
4-14	283125	Main Jet	1	
4-15	261871	O-Ring	1	
4-16	261876	E-Ring	1	
4-17	282301	Gasket	1	
4-18	264807	Cap Screw	1	M5x16
4-19	283086	Divider	1	
4-20	283087	Gasket	1	
4-21	262720	Cap Screw	2	M5x55
4-22	282481	Plate	1	
4-23	282306	Element	1	
4-24	282307	Cleaner Cover	1	
4-25	281438	Knob	1	
4-26	261117	Clip	2	
4-27	282299	Pump	1	
4-28	282512	Fuel Pipe	1	
4-29	282302	Case Ass'y	1	Incl.30-35
4-30	282305	Lever	1	
4-31	269032	Screw	1	
4-32	269423	Nut	1	
4-33	282303	Case Body	1	
4-34	282484	Sleeve	3	
4-35	282304	Valve	1	
4-36	282309	Fuel Tank Ass'y	1	Incl.37-47
4-37	282310	Fuel Tank	1	
4-38	267328	Fuel Filter Ass'y	1	
4-39	261117	Clip	1	
4-40	281564	Fuel Tank Cap Ass'y	1	Incl.41
4-41	269377	Gasket	1	
4-42	282312	Fuel Pipe Ass'y	1	Incl.43-47
4-43	261590	Breather	1	
4-44	261117	Clip	1	
4-45	268065	Grommet	1	

4. BC4320H-RS
CARBURETOR, FUELTANK

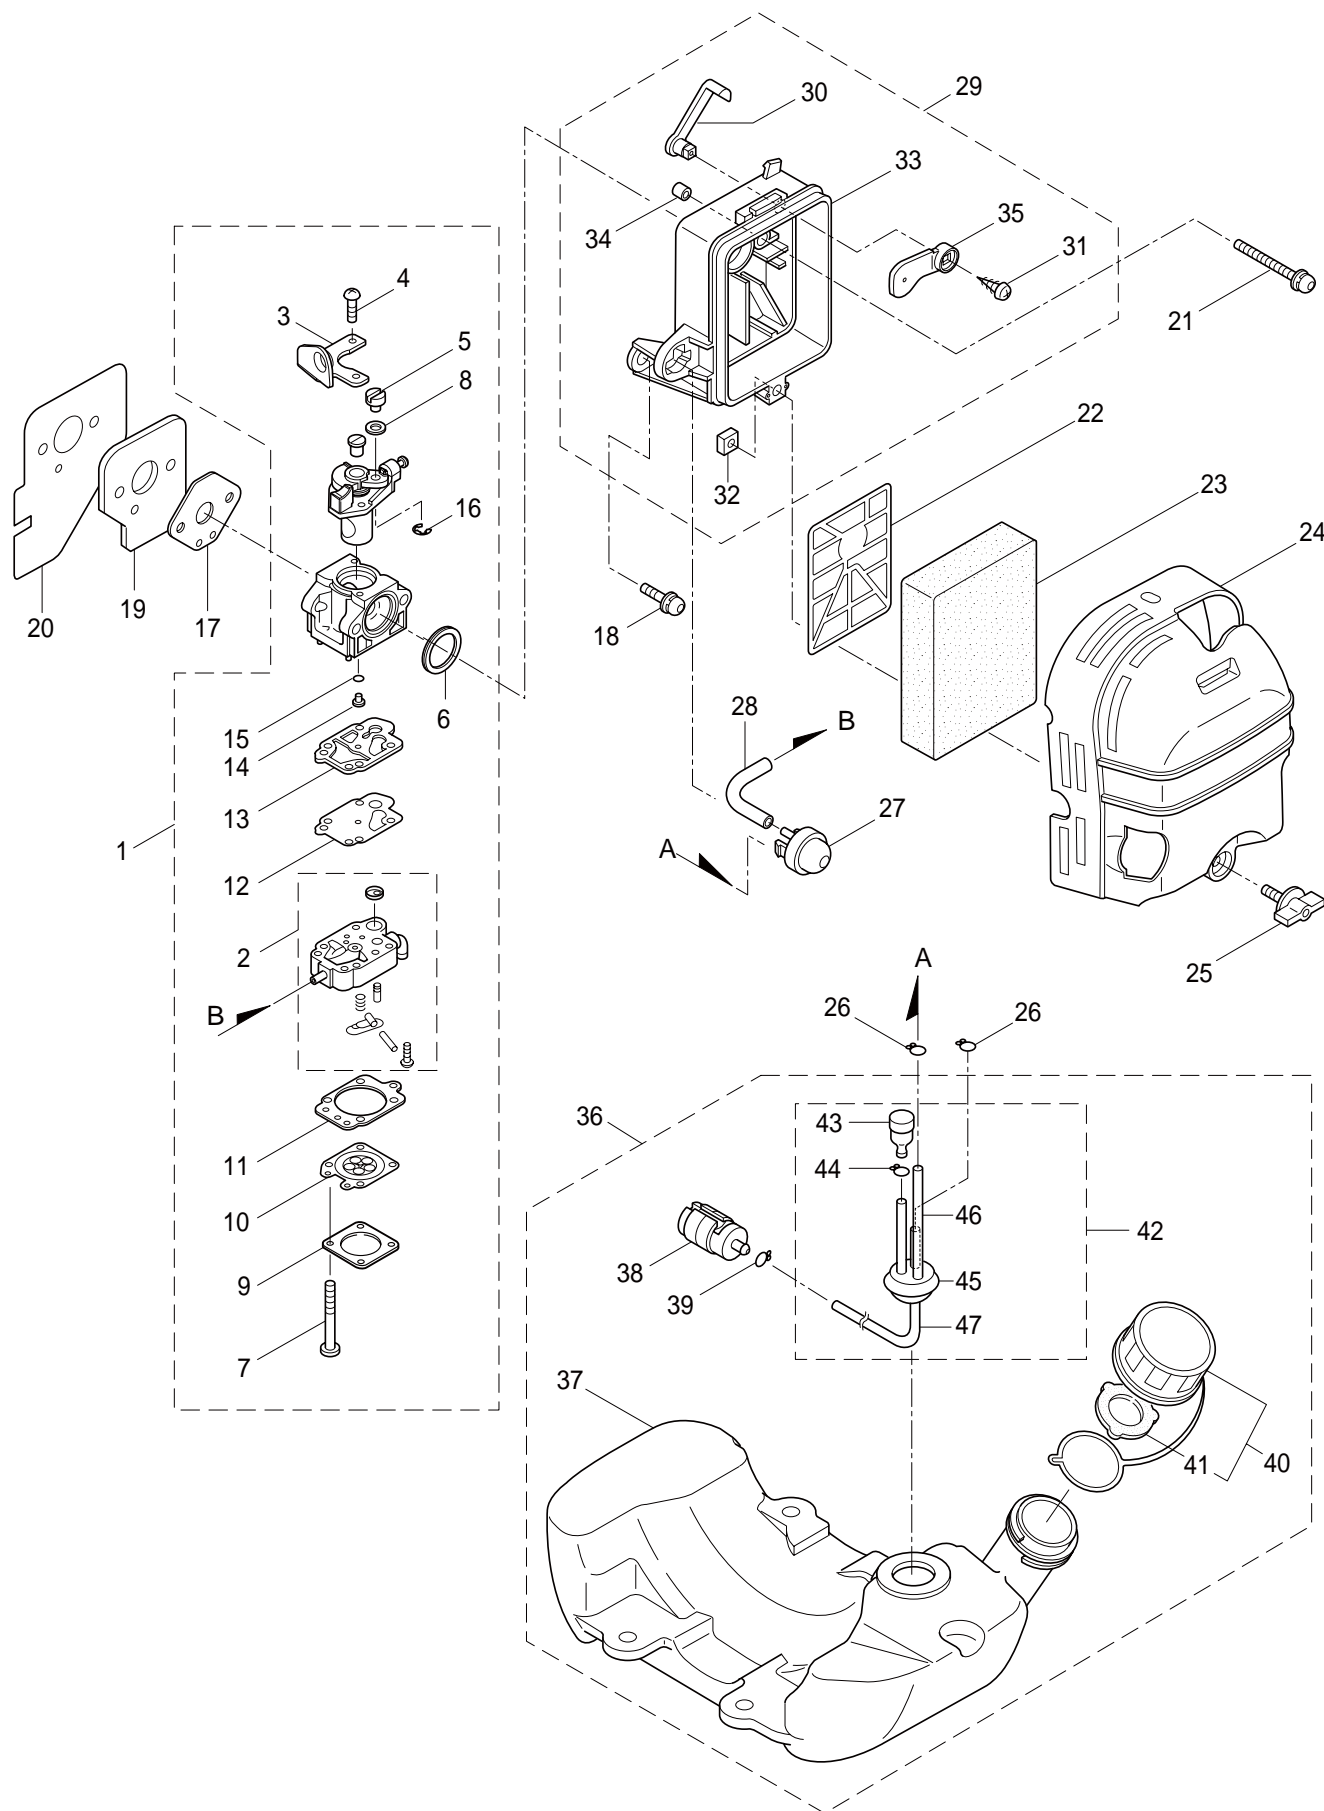

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	282511	Return Pipe	1	
4-47	262649	Fuel Pipe	1	