

PARTS LIST

BC2300H-RS

CONTENTS

1. MAIN BODY	1 ~ 2
2. GEARCASE.....	3 ~ 4
3. ENGINE	5 ~ 8
4. CARBURETOR, FUEL TANK	9 ~ 10
5. ACCESSORIES	11 ~ 12


2009. 04.



MARUYAMA


P/N 522610-1

1. BC2300H-RS
MAIN BODY

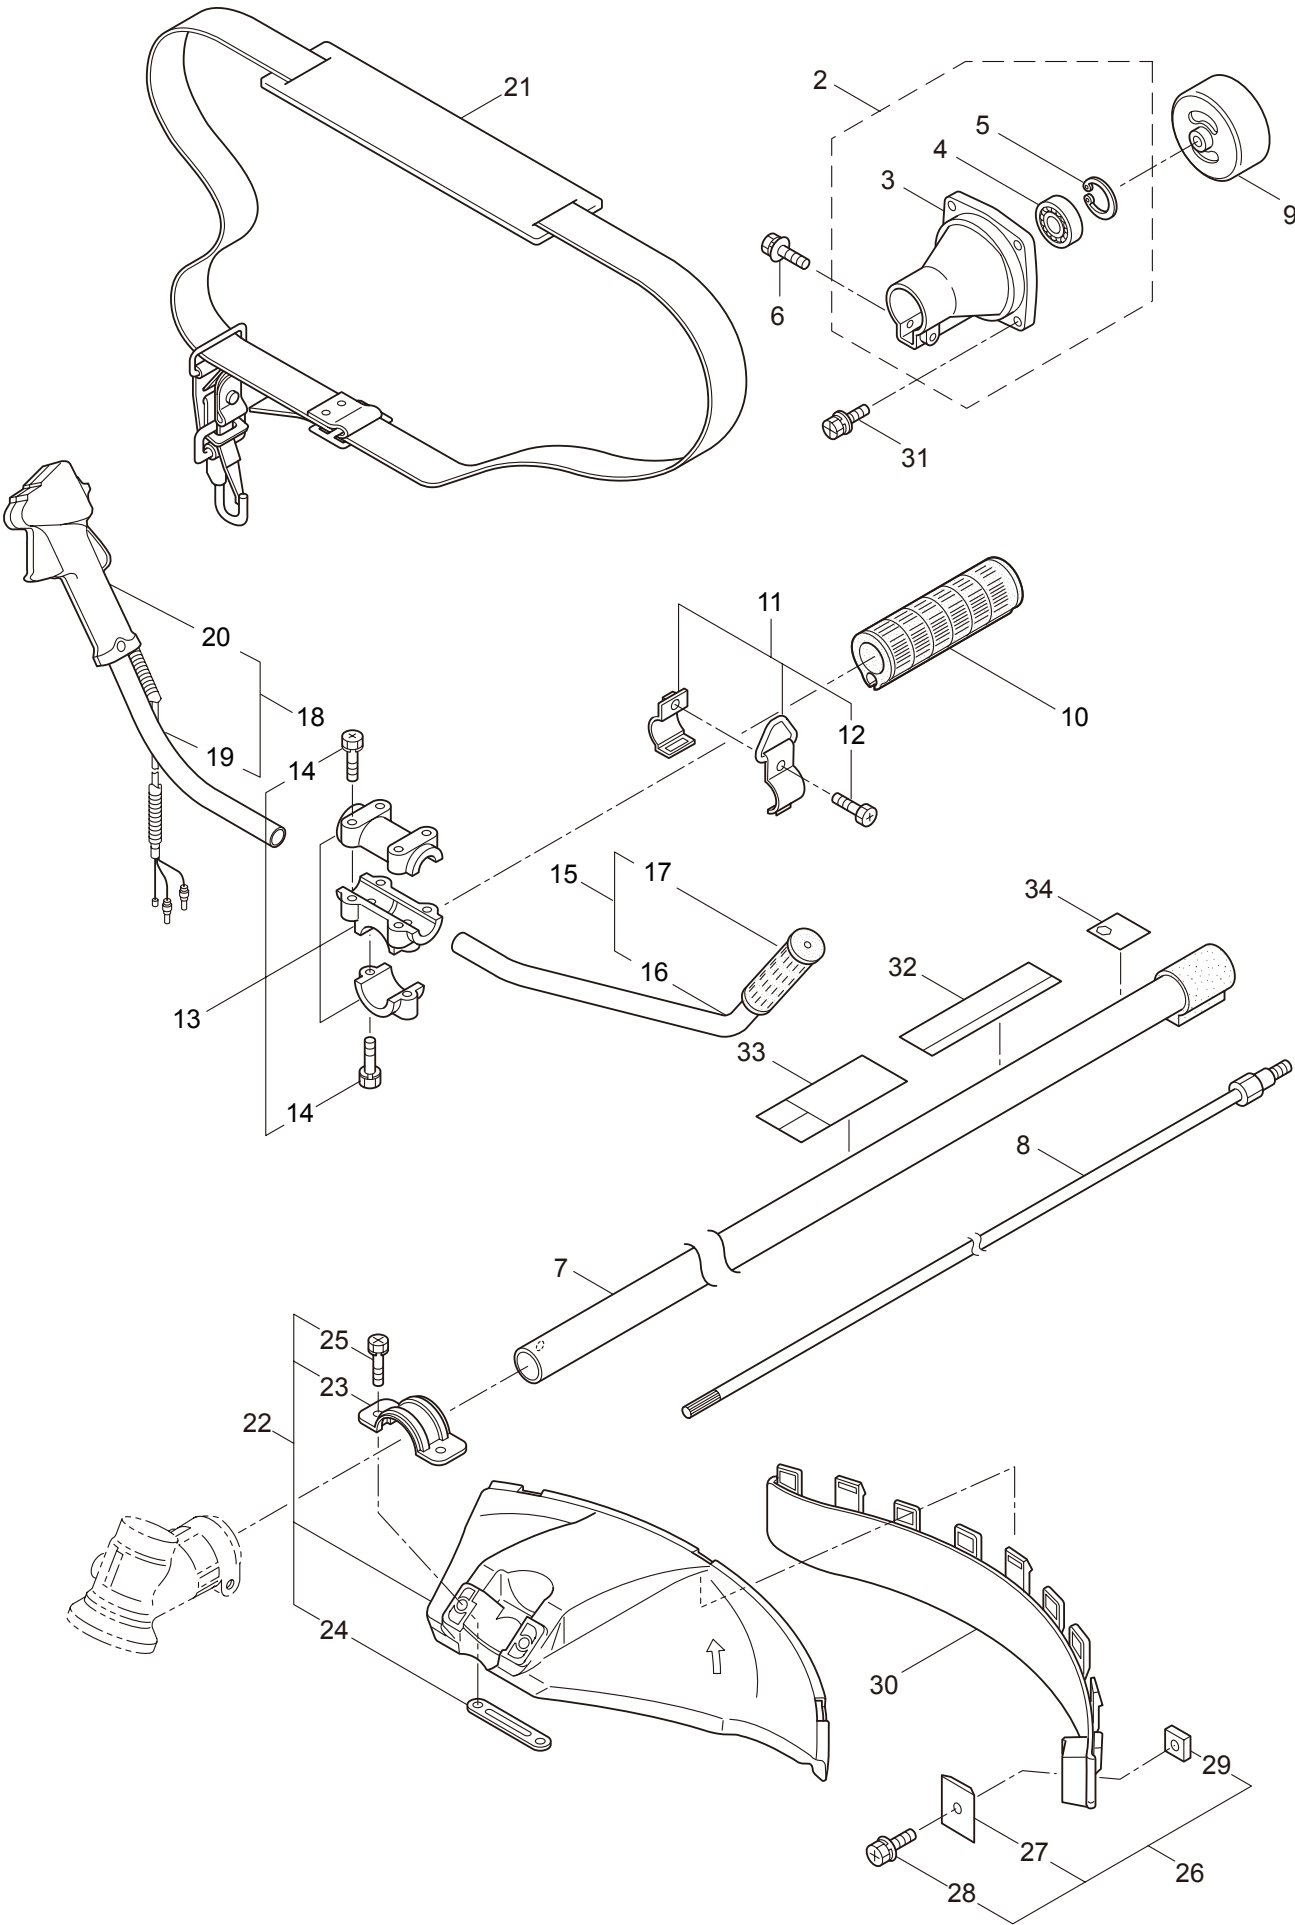


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	363514	BC2300H-RS	1	
1-2	221473	Clutch Case Ass'y	1	Incl.3-5
1-3	221474	Clutch Case	1	
1-4	016405	Bearing	1	#6200ZZ
1-5	013825	Snap Ring	1	#30
1-6	096042	Bolt	1	M5x30
1-7	223252	Driveshaft Tube	1	
1-8	226399	Driveshaft Ass'y	1	
1-9	229091	Clutch Drum	1	
1-10	215532	Shaft Grip	1	
1-11	054691	Hanging Bracket Ass'y	1	Incl.12
1-12	089738	Bolt	1	M5x15
1-13	215418	Bracket Ass'y	1	Incl.14
1-14	092561	Bolt	6	M5x25
1-15	229859	Handle Ass'y-Left	1	Incl.16,17
1-16	221441	Handle	1	
1-17	226503	Grip	1	
1-18	230798	Handle Ass'y-Right	1	Incl.19,20
1-19	223286	Handle	1	
1-20	230791	Throttle Trigger	1	
1-21	220533	Hanging Strap Ass'y	1	
1-22	228392	Safety Cover Ass'y	1	Incl.23-25
1-23	227820	Bracket	1	
1-24	227819	Bracket	1	
1-25	092555	Bolt	2	M6x30
1-26	228301	Code Cutter Ass'y	1	Incl.27-29
1-27	227823	Code Cutter	1	
1-28	817002	Bolt	1	M5x20
1-29	228325	Nut	1	
1-30	227812	Extension	1	
1-31	817002	Bolt	4	M5x20
1-32	229864	Label	1	BC2300H-RS
1-33	223188	Label	1	
1-34	228043	Label	1	

2. BC2300H-RS GEARCASE

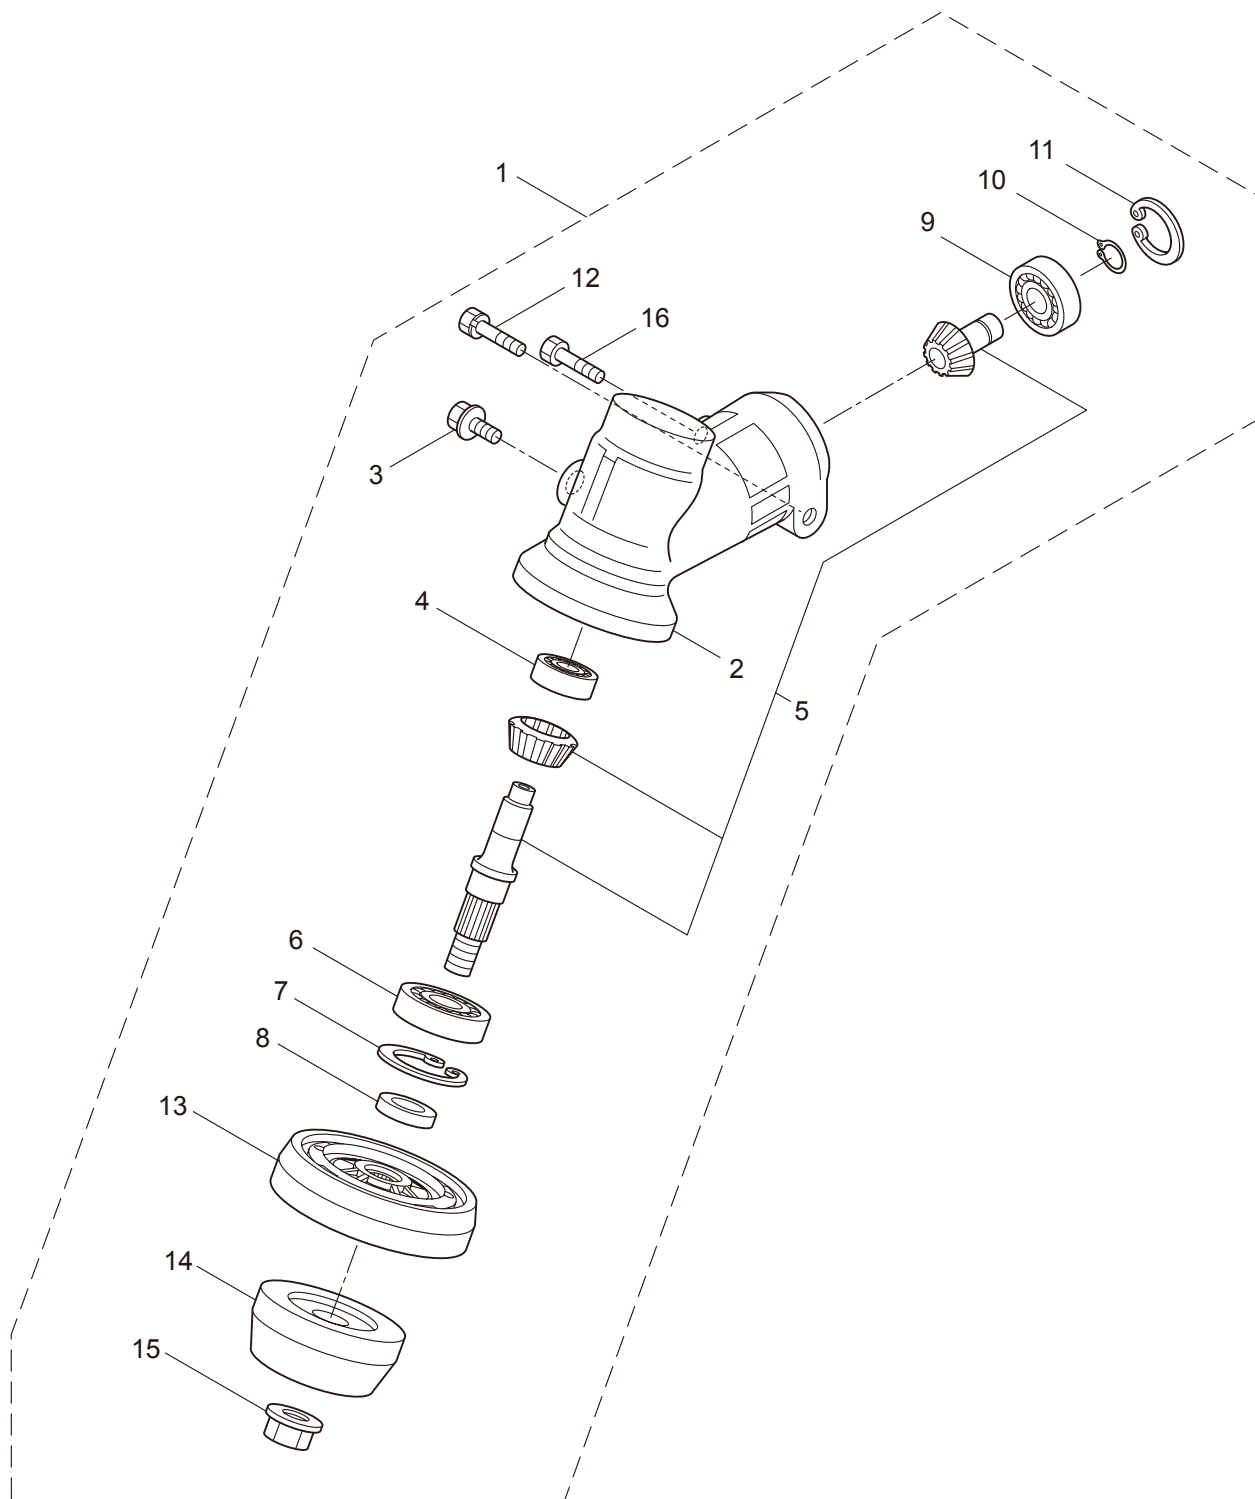


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	225835	Gearcase Ass'y	1	Incl.2-16
2-2	226284	Gearcase	1	
2-3	225897	Bolt	1	M6x8
2-4	226285	Bearing	1	#626
2-5	227108	Gear Set	1	
2-6	112184	Bearing	1	#6000DDU
2-7	054676	Snap Ring	1	#26
2-8	225898	Collar	1	10x16xT2.6
2-9	226286	Bearing	1	#609ZZ
2-10	228477	Snap Ring	1	#9
2-11	140270	Snap Ring	1	#24
2-12	092561	Bolt	1	M5x25
2-13	225891	Boss Adapter	1	
2-14	225892	Blade Boss B	1	
2-15	225893	Nut	1	M8
2-16	225896	Bolt	1	M5x10

3.BC2300H-RS ENGINE

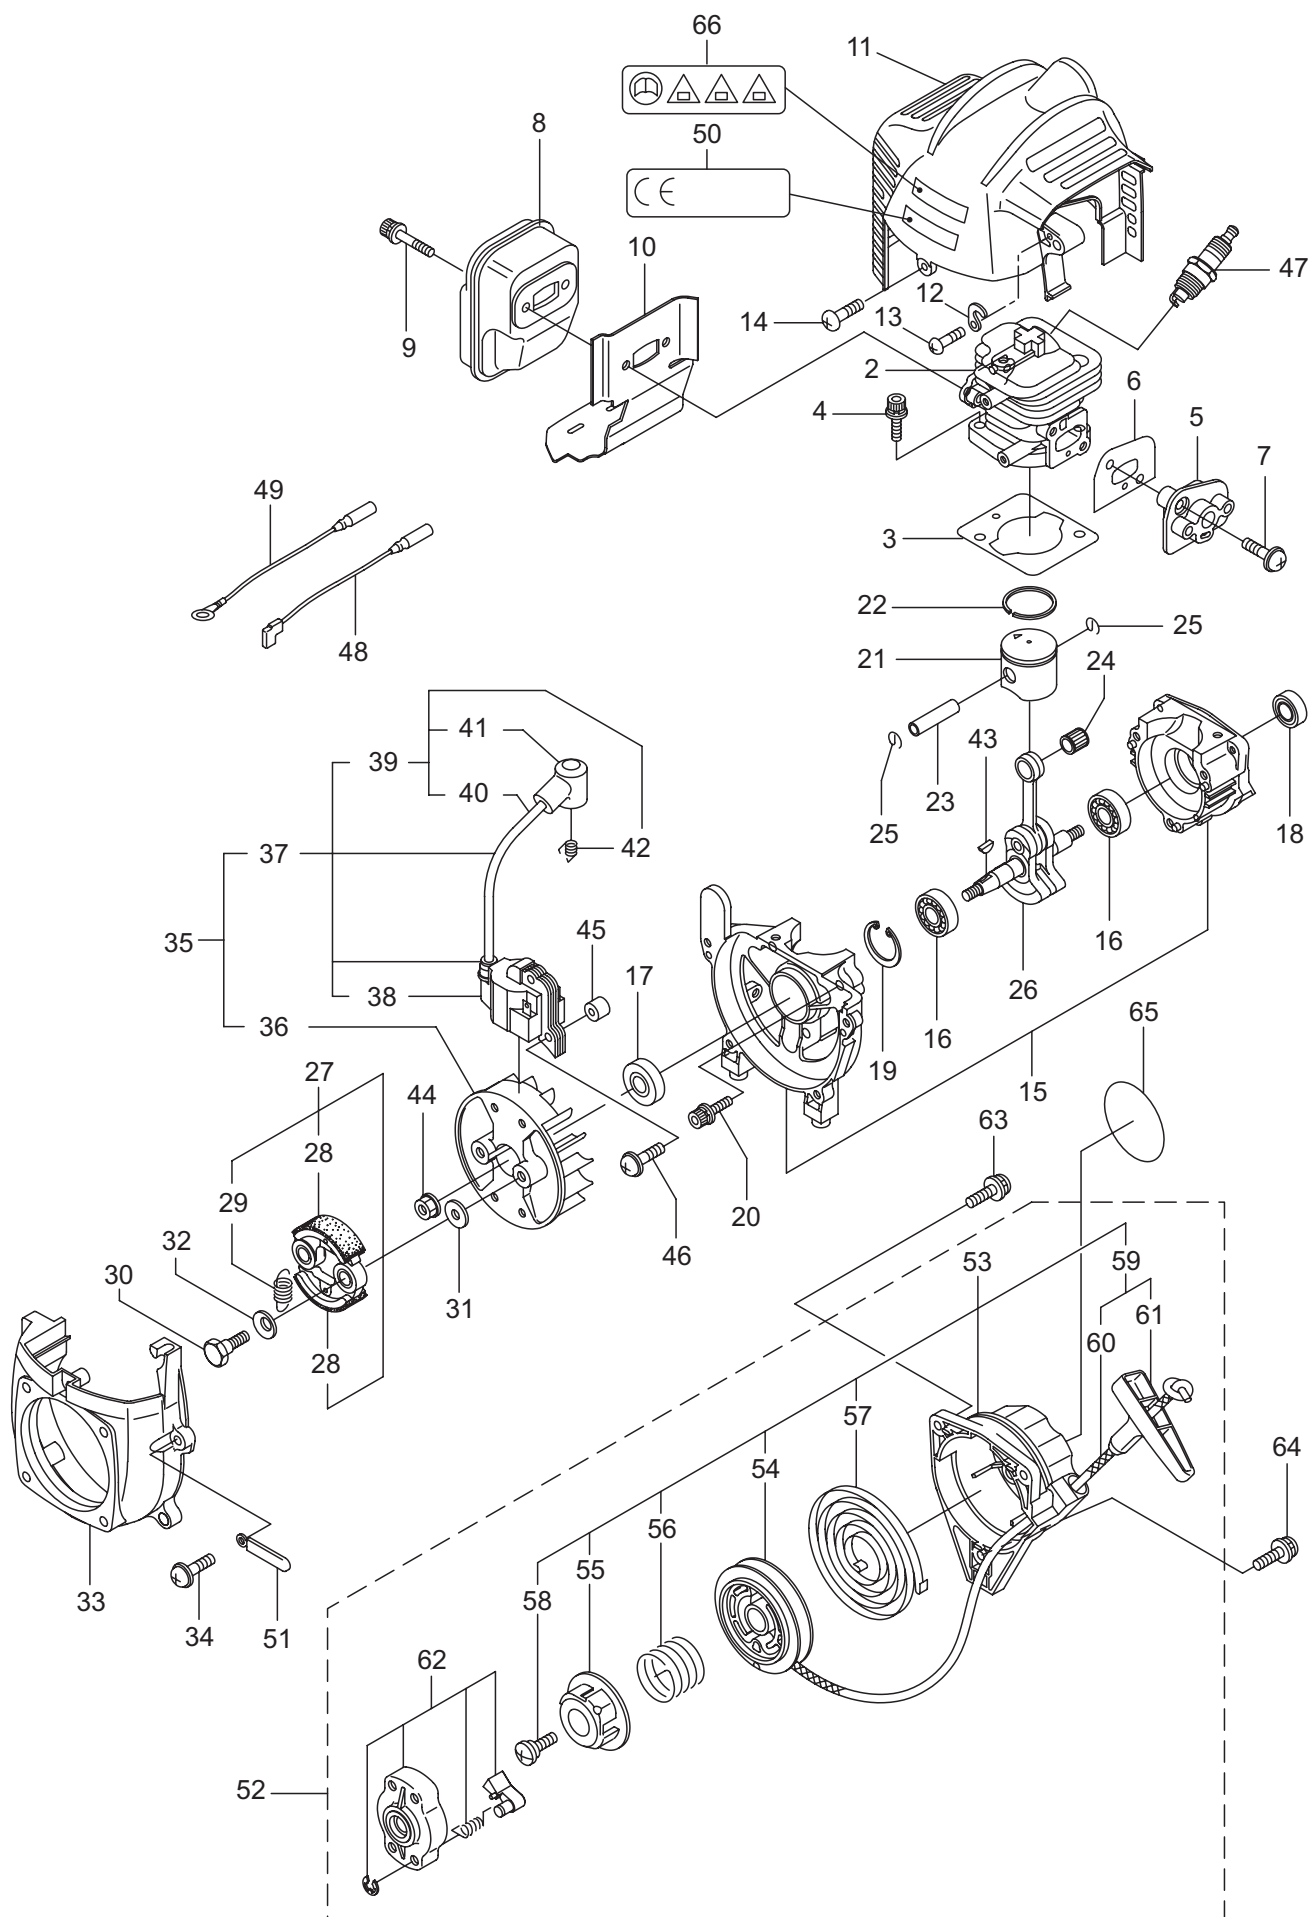


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	858235	Engine	1	EE230/11
3-2	266249	Cylinder	1	New gasket required
3-3	283420	Gasket	1	
3-4	267290	Cap Screw	2	M5x20
3-5	263772	Insulator	1	New gasket required
3-6	267049	Gasket	1	
3-7	269826	Screw	2	M5x25
3-8	281524	Muffler	1	
3-9	266264	Cap Screw	2	M5x50
3-10	280409	Gasket	1	
3-11	280846	Top Cover	1	
3-12	283983	Hook	1	
3-13	283984	Screw	1	M3x10
3-14	280144	Tapping Screw	1	
3-15	280341	Crankcase	1	
3-16	280488	Bearing	2	PPL 6001
3-17	261492	Oil Seal	1	ISCD12287
3-18	261386	Oil Seal	1	ISCD12227
3-19	055185	Snap Ring	1	#28
3-20	261612	Cap Screw	3	M5x30
3-21	283265	Piston	1	
3-22	263789	Piston Ring	1	
3-23	281185	Piston Pin	1	
3-24	261037	Bearing, Needle	1	KBK8x11x11.8x1
3-25	261576	Clip, Piston	2	
3-26	267193	Crankshaft/Conn.Rod Ass'y	1	
3-27	269168	Clutch Ass'y	1	Incl.28,29
3-28	269169	Clutch Shoe	2	(2)required
3-29	269173	Spring, Clutch	1	
3-30	269647	Clutch Bolt	2	
3-31	269175	Washer	2	6.1x15x1.6
3-32	261777	Wave Washer	2	
3-33	283386	Fan Cover	1	
3-34	269831	Screw	4	M5x20
3-35	280469	Magneto Ass'y	1	Incl.36-42
3-36	261356	Rotor/Fan	1	
3-37	280470	Ignition Coil Ass'y	1	Incl.38-42
3-38	267401	Coil	1	
3-39	280868	Spark Plug Wire Ass'y	1	Incl.40-42
3-40	280869	Spark Plug Wire	1	
3-41	280870	Plug Boot	1	
3-42	280871	Connector	1	
3-43	261076	Woodruff Key	1	3x10
3-44	261417	Nut, Rotor	1	M8
3-45	280381	Spacer	2	

3. BC2300H-RS ENGINE

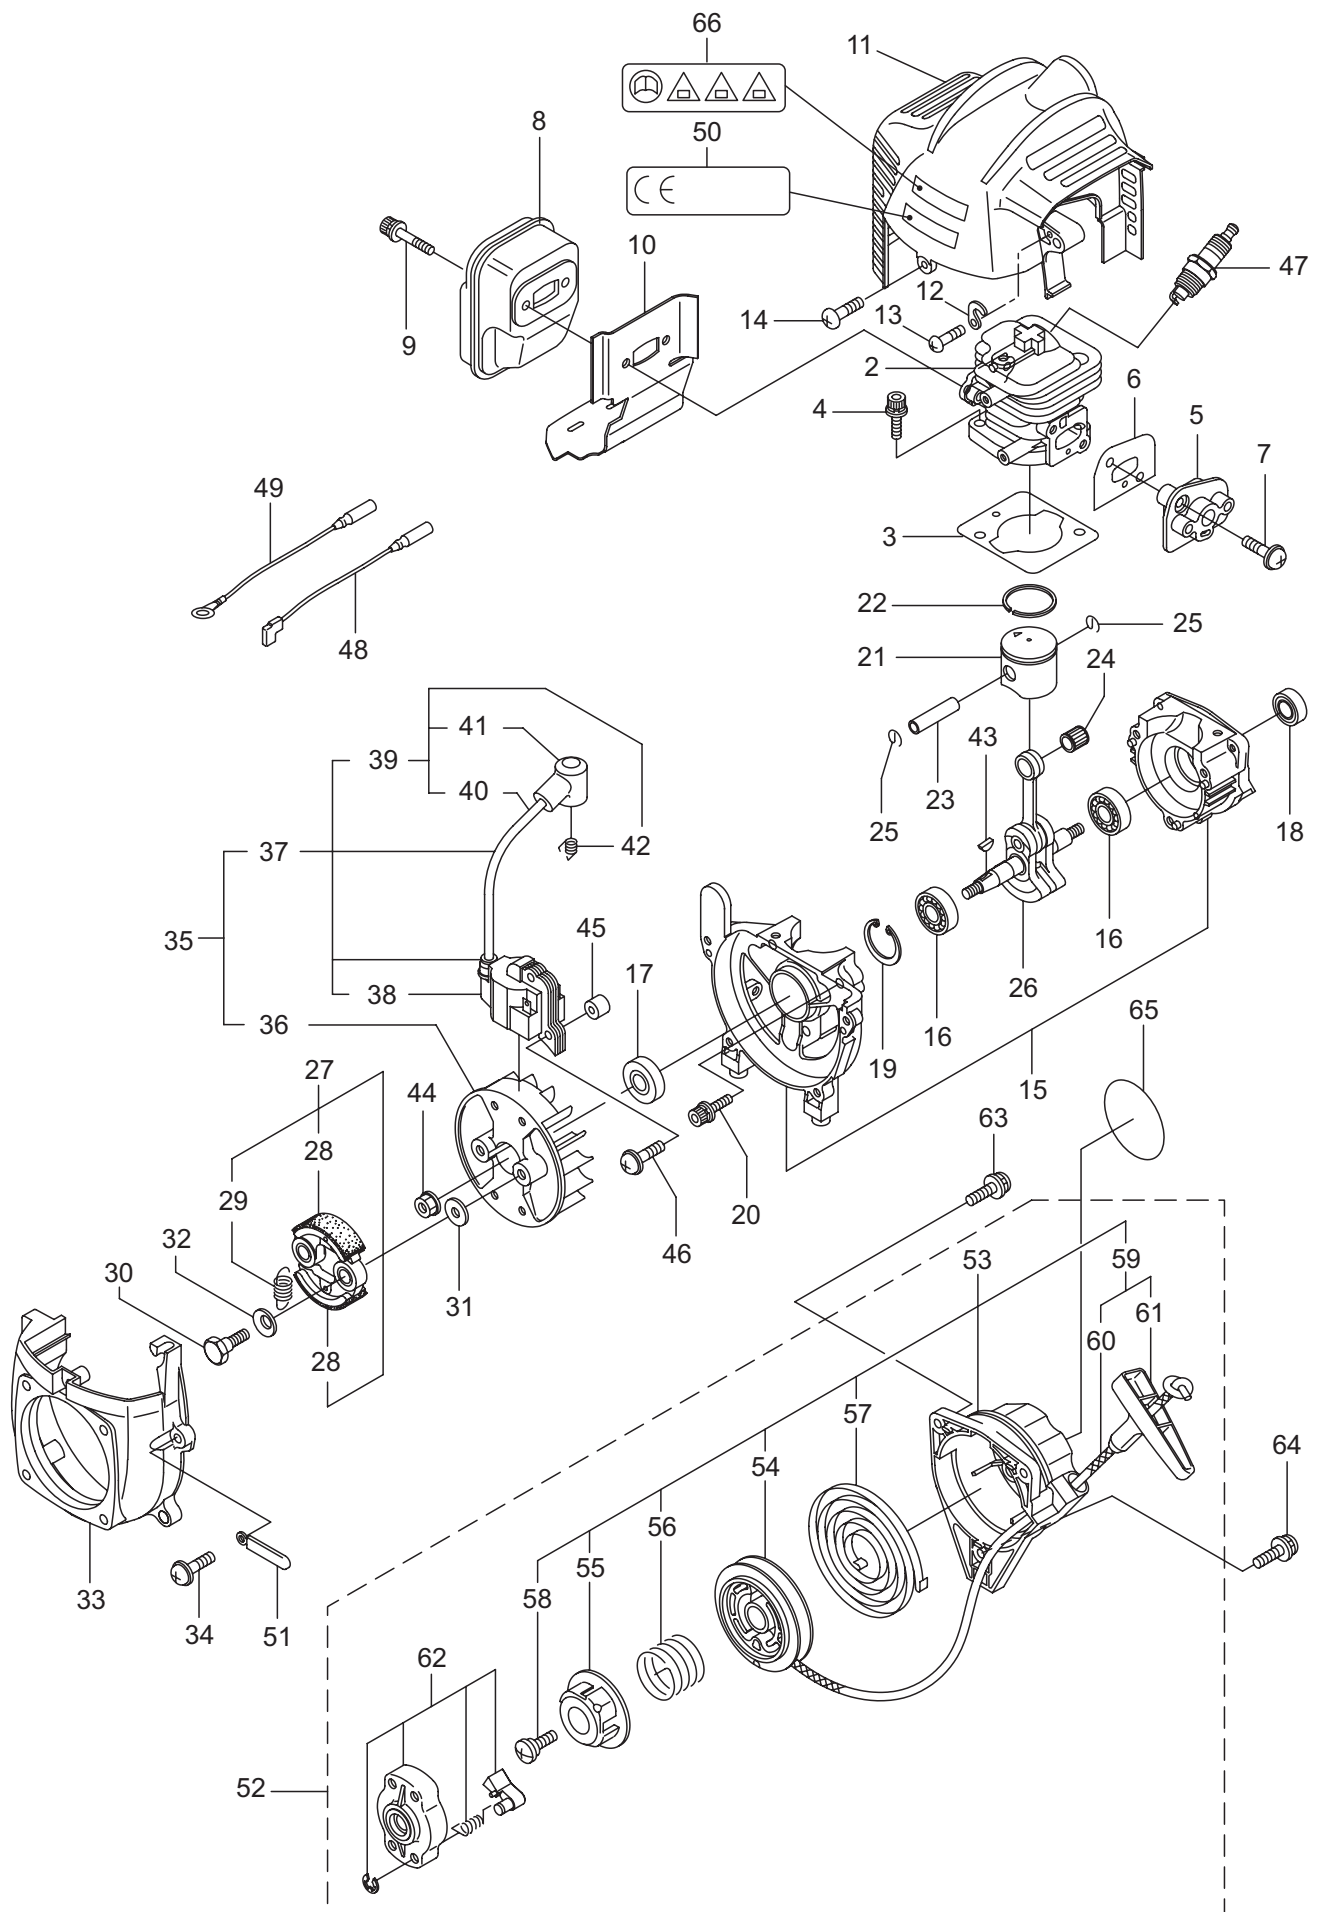


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	269832	Screw	2	M4x25
3-47	262483	Spark Plug	1	NGK BP6MR6Y
3-48	267492	Lead	1	130L
3-49	282880	Wire, Lead	1	
3-50	267561	Label	1	
3-51	264588	Clamp	1	
3-52	282404	Recoil Starter Ass'y	1	Incl.53-62
3-53	282405	Recoil Ass'y	1	Incl.54-61
3-54	283411	Reel	1	
3-55	283412	Cam Plate	1	
3-56	280930	Spring	1	
3-57	280931	Spiral Spring	1	
3-58	267213	Screw	1	
3-59	280932	Starter Rope Ass'y	1	Incl.60,61
3-60	280933	Starter Rope	1	
3-61	267219	Starter Grip	1	
3-62	280934	Starter Pawl Ass'y	1	
3-63	280489	Screw	2	M4x20
3-64	269833	Screw	1	M4x16
3-65	283992	Label	1	BC2300RS
3-66	284587	Label	1	

4. BC2300H-RS CARBURETOR, FUEL TANK

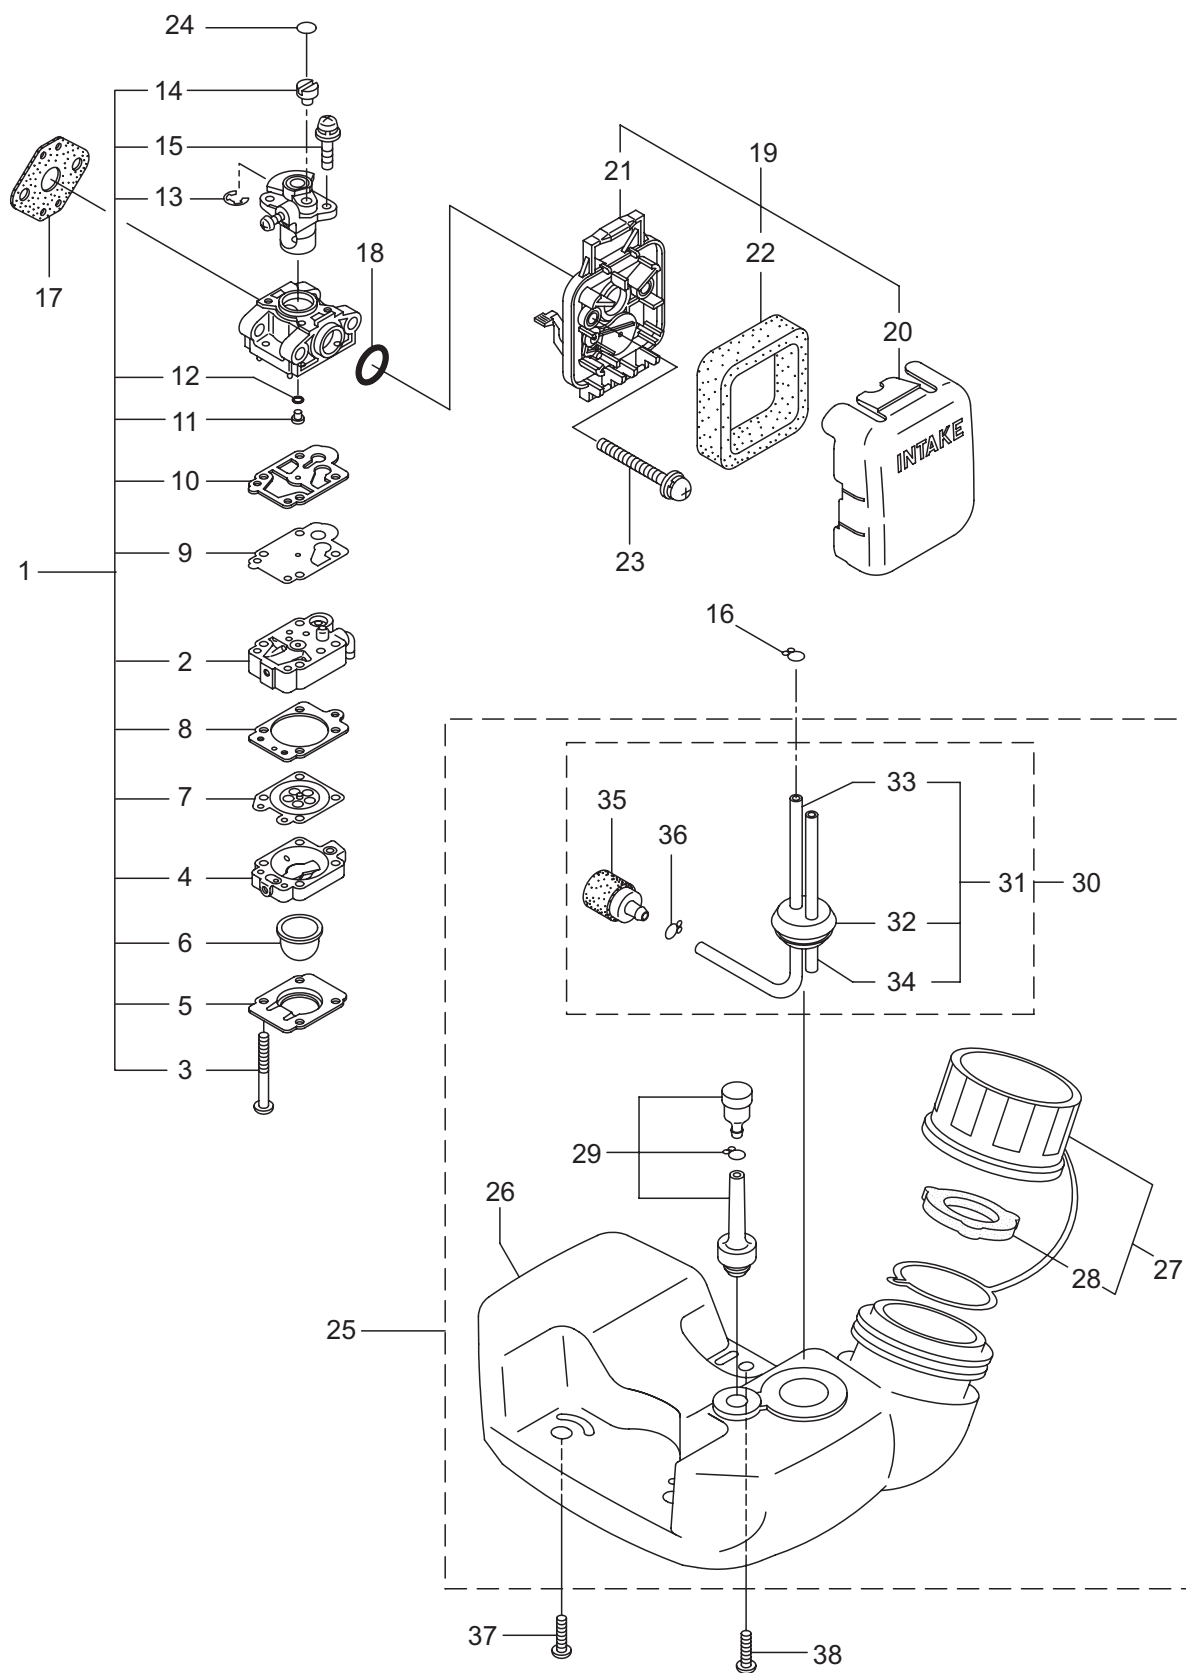

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	283893	Carburetor Ass'y	1	Incl.2-15
4-2	263739	Pump Body	1	
4-3	262996	Screw	4	
4-4	262991	Purge Body	1	
4-5	262992	Cover Plate	1	
4-6	261874	Primer Bulb	1	
4-7	283905	Diaphragm, Meterring	1	
4-8	262993	Gasket	1	
4-9	262994	Diaphragm,Fuel Pump	1	
4-10	282576	Gasket	1	
4-11	262730	Main Jet	1	#39
4-12	261871	O-Ring	1	
4-13	261876	E-Ring	1	
4-14	261658	Swivel	1	
4-15	264682	Screw	2	
4-16	261117	Clip	1	
4-17	261864	Gasket	1	
4-18	264691	O-Ring	1	
4-19	266420	Cleaner Ass'y	1	Incl.20-22
4-20	264709	Cover	1	
4-21	266433	Housing	1	
4-22	264695	Filter	1	
4-23	269834	Screw	2	
4-24	280020	Swivel Ring	1	
4-25	285728	Fuel Tank Ass'y	1	Incl.26-36
4-26	285664	Fuel Tank	1	
4-27	281564	Fuel Tank Cap Ass'y	1	Incl.28
4-28	269377	Gasket	1	
4-29	261696	Breather Ass'y	1	
4-30	265752	Fuel Pipe Pick-up Ass'y	1	Incl.31-36
4-31	264031	Fuel Pipe Ass'y	1	Incl.32-34
4-32	261115	Grommet	1	
4-33	261690	Fuel Pipe	1	160L
4-34	263038	Return Pipe	1	3x6x85L
4-35	264653	Filter Ass'y	1	
4-36	261117	Clip	1	
4-37	269828	Screw	2	M5x16
4-38	281208	Screw	1	M5x16

5. BC2300H-RS
ACCESSORIES

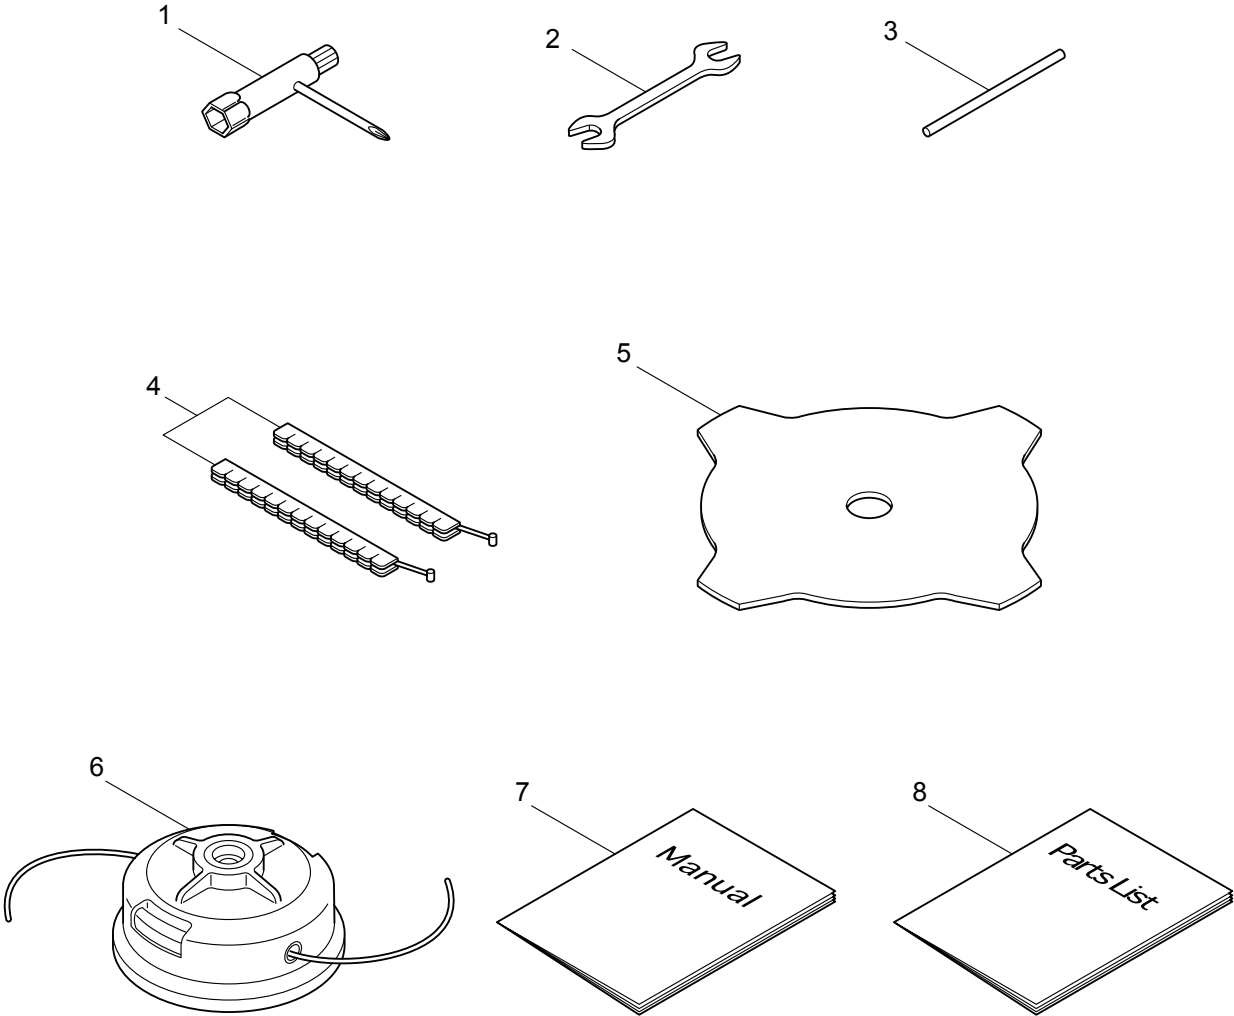

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	210418	Box Spanner	1	13x19x(+)
5-2	022865	Double-ended Wrench	1	8x10
5-3	210181	Lever Handle	1	3.5x170L
5-4	220534	Blade Cover	1	
5-5	210179	Mowing Blade	1	230x4
5-6	229874	Semi-Auto Head (L)	1	
5-7	229045	Instruction Manual	1	
5-8	522610	Parts List	1	BC2300H-RS